

Welcome
to
LOCALTEL
COMMUNICATIONS

TV PLUS



INSTRUCTION MANUAL



What is TV Plus?

TV Plus is the latest in home entertainment technology. TV Plus offers the same lineup, channel packages, and even channel numbers that you know and love on our current TV services but adds never before seen features putting you in control of your TV experience!

DVR RECORDING OPTIONS

Network DVR: A DVR with a hard drive is not required to record programs when using our network DVR and recordings can be played on any box in the home. The Network DVR only saves a recording for 30 days, but you can use the feature in combination with a traditional DVR with a hard drive so you can save the shows you want for a longer period of time. You will not be able to choose between DVRs. All items will record to the “In-home” DVR if applicable. The recordings will overflow to the Network DVR when the in-home DVR is full, or both tuners on the in-home DVR are in use.

Whole Home DVR: Paired with our Network DVR this feature allows for the playback of a recording on any STB in the home, even if it's not a DVR. You can start to watch a recorded program in one room and finish it in another. You can setup a recording in your living-room and then watch it in the den.

Recording a live program:



- Press the **GUIDE** button on the remote.
- Select the **PROGRAM** you want to record.
- Press the **RECORD** button

(●) Red dot will appear next to the program being recorded.

Scheduling a single show recording:

- Press the **GUIDE** button on the remote.
- Select the **PROGRAM** you want to record, then press **OK**.
- Select **RECORD PROGRAM** from the list of options that appears, then press **OK**.



The options will then close and the (●) Red Record Icon will appear next to the program.

Scheduling a Series recording:

- Press the **GUIDE** button on the remote
- Select the **PROGRAM** you want to record, then press **OK**.
- Select **RECORD SERIES** from the list of options that appear, then press **OK**.
- Another list of options will appear. Use the **UP or DOWN** arrows to scroll between the options. ▼ ▲

Press **OK** to select the option that you want to use.

- When you have made the changes to the settings you want, arrow down to the **OK**, then press **OK**.

The series recording is now scheduled.

Recording instructions continues next page.



Recording instructions continued...

Viewing a Recorded Program:

Press the **DVR LIST** button on the remote.



Select **RECORDINGS**.

Press the **RIGHT ARROW** to move to the pane showing all recorded programs. ►

Use the **UP and DOWN** arrows to **HIGHLIGHT THE PROGRAM** you want to play and then press **OK**.

RESTART TV Our Favorite Feature!

Restart allows you to go back to the beginning of a live program regardless of how far into the program it is. As long as the guide hasn't moved to the next time slot, you can use the restart feature to go all the way back to the beginning. How often have you turned on the TV in the middle of a show or event that you wanted to see? This feature eliminates that frustration by allowing you to go back in TV time and watch your show from the start.

How to use Restart:

- Press the Guide button on the remote and choose the channel with the program you wish to restart and then press **OK**.
- Once you are on the channel, press OK a second time. A window will appear on the screen.
- Choose the top window option that says **Restart TV**.
- Your program will play from the beginning.

Please call Technical Support at

509-888-5700

if you need assistance with these features!

Hours: 6am to Midnight, 7 days per week.








CATCH UP TV

This exciting feature gives you the ability to go backwards in the guide and watch a program that aired in the last 3 days, even if you didn't record it. Did you miss the premier of your favorite show? TV Plus has you covered. This feature is not available on all channels. Available channels are marked with an * on the guide.

How to use Catch Up from the Guide:

- Press the **GUIDE** button on the remote.
(Channels that allow the Catch Up Feature will have an asterisk * next to the channel name in the guide.)
- Use the **BACK ARROW**  to move back in the guide to find the program you wish to watch.
The guide will allow you to go back 3 full days.
- Press **OK**. A window will appear on the screen.
- Choose the option **WATCH NOW**. Your program will begin playing.

How to use Catch Up from the TV Application:

- Press the **MENU** button on the remote. 
- Choose the **CATCH UP** application/option.
- Use the **UP or DOWN** arrows to select the options By Channel, By Show or By Date; whichever you prefer, then press. 
- The top level for the selected browse method appears.
- Use the to select the desired range and then use the **UP or DOWN** arrows to scroll through the program options.
- When you have found the **PROGRAM** you wish to watch, press **OK**. Your program will begin playing.

Please call Technical Support at

509-888-5700

if you need assistance with these features!

Hours: 6am to Midnight, 7 days per week.

